
BIM Revit Models Smart Window

Smart Style Property


The "Smart Style" format is 121.ABCDE where 121 is the lights (i.e. transom/mullion) configuration working left to right ONE + TWO + ONE shown below

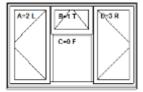



Where ABCDEF set the opening light types working start at A=top left working left to right as above

0 fixed, 1 top hung, 2 left hung, 3 right hung Therefore 121.2106 is Left, Top, Fixed, Right.

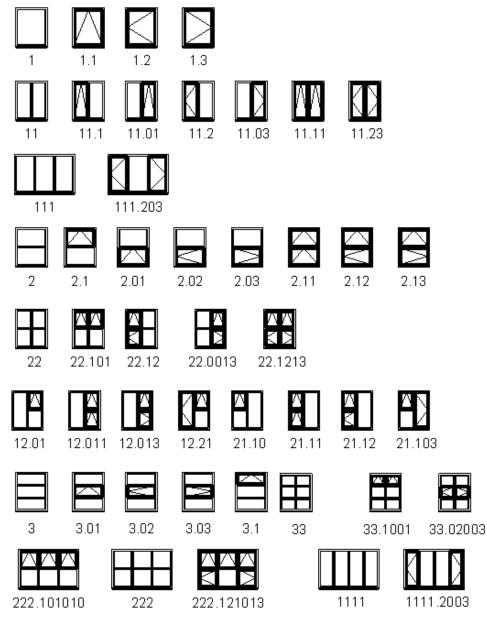



Properties							×
	SMARTS Standard						•
Windows (1)			\sim	8	Edit	Typ	e
Constraints						\$	^
Level		Level 1					
Sill Height		600.0					
Graphics						\$	
Show Open							
Smart Style							
Materials and Finishes						\$	
Course Instal	-	harten er		- 1			